


STEEL BAR BENDER SB40B EXPLODED VIEW

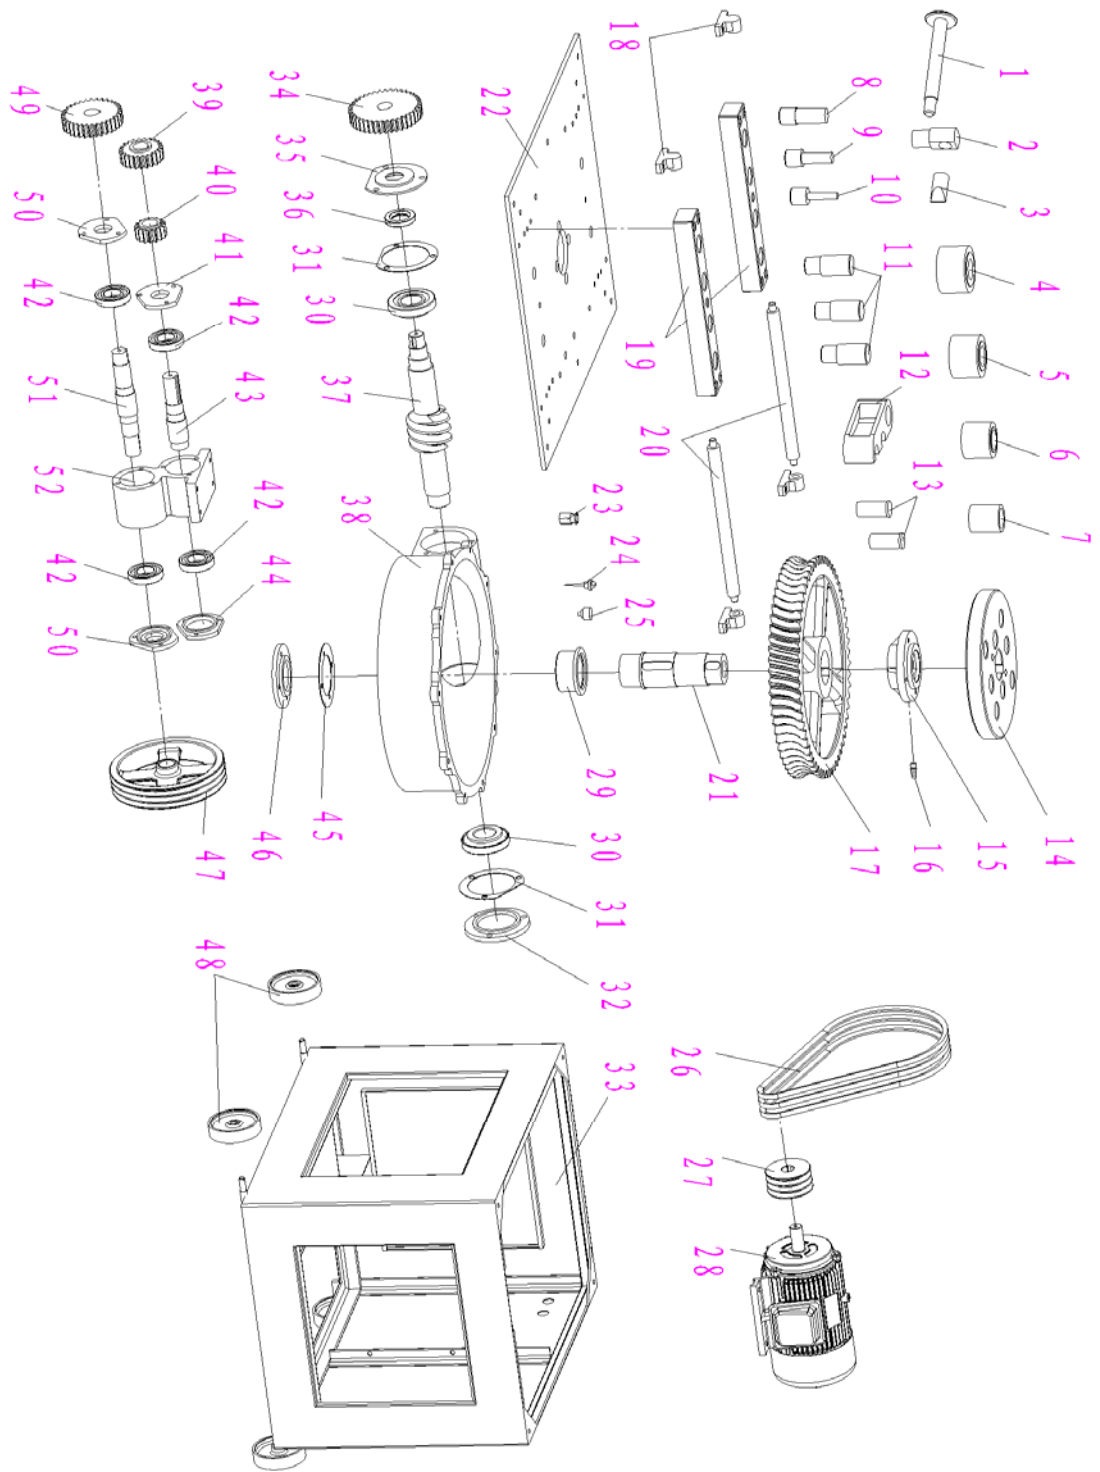

SB40B EXPLODED PARTS LIST

Serial No.	Spare parts name	Quantity	Serial No.	Spare parts name	Quantity
1	Striker Rod with hand wheel	1	27	Motor Pulley	1
2	Striker Pile head	1	28	Motor 3KW-4P	1
3	Striker cusp	1	29	Sleeve	1
4	No.4 Pile head bush (ϕ 109)	1	30	Bearing 7310	2
5	No.3 Pile head bush (ϕ 99)	1	31	Paper gasket	2
6	No.2 Pile head bush (ϕ 84)	1	32	Worm cover	1
7	No.1 Pile head bush (ϕ 64)	1	33	Machine frame	1
8	No.1 Pile head (ϕ 25)	1	34	Worm gear(40)	1
9	No.2 Pile head (ϕ 35)	1	35	Worm cover	1
10	No.4 Pile head (ϕ 15)	1	36	Oil seal(40*70*12)	1
11	No.3 Pile head (ϕ 48)	1	37	Worm	1
12	Striker	1	38	Worm box	1
13	Strike Roller	2	39	Worm gear(23)	1
14	Working Disk	1	40	Worm gear(16)	1
15	Up-sliding sleeve	1	41	No.2 shaft cover	1
16	Oil Nipple	1	42	Bearing 208	4
17	Worm gear	1	43	No.2 shaft	1
18	Roller base	4	44	No.2 shaft cover	1
19	Saddle	1	45	Main shaft Paper gasket	1
20	Roller	1	46	Main shaft down cover	1
21	Main shaft	1	47	No.1 shaft pulley	1
22	Working beach	1	48	Wheels	4
23	Oil cup screw	1	49	Big gear(33)	1
24	Vernier	1	50	No.1 shaft cover	3
25	Oil cup	1	51	No.1 shaft	1
26	V-belt A1219	3	52	Double shaft base	1